



**FORD MUSTANG 1988-2006
VEHICLE WIRING**

WIRING INFORMATION: 1988 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	DK.GREEN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1989 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	DK.GREEN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1990 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	DK.GREEN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1991 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	TAN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1992 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	DK.GREEN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1993 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK or RED/BLUE	Ignition harness
12V IGNITION WIRE	RED/GREEN	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
POWER DOOR LOCK (5-wire reverse polarity)	PINK/YELLOW	At Harness In Driver's Kick Panel
POWER DOOR UNLOCK (5-wire reverse polarity)	PINK/GREEN	At Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (+)	BLACK/BLUE	At Door Pin Switch
TRUNK RELEASE (+)	PURPLE/YELLOW	At Trunk Release Switch
TACHOMETER WIRE	DK.GREEN/YELLOW	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Plug At Brake Pedal Switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1994 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	TAN/WHITE	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
SECOND ACCESSORY WIRE	BLACK/GREEN	Ignition harness
POWER LOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (+)	BLACK/BLUE or GRAY	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TRUNK TRIGGER (+)	BLACK/PINK	At Trunk light
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel
TACHOMETER WIRE	GRAY/ORANGE or DK.GREEN	Module Below Air Intake On Passenger Side Of Motor
BRAKE WIRE (+)	RED/LT.GREEN	At Brake pedal switch
HORN TRIGGER (-)	YELLOW	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1995 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	TAN/WHITE	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
SECOND ACCESSORY WIRE	BLACK/GREEN	Ignition harness
POWER LOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/YELLOW	Harness In Driver's Kick Panel
POWER DOOR UNLOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (+)	BLACK/BLUE or GRAY	Harness In Driver's Kick Panel
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
TRUNK TRIGGER (+)	BLACK/PINK	At Trunk light
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel
TACHOMETER WIRE	GRAY/ORANGE or DK.GREEN	Module Below Air Intake On Passenger Side Of Motor
BRAKE WIRE (+)	RED/LT.GREEN	At Brake pedal switch
HORN TRIGGER (-)	YELLOW	Harness At Column From Steering Wheel
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door

WIRING INFORMATION: 1996 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	TAN/WHITE	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
SECOND ACCESSORY WIRE	BLACK/GREEN	Ignition harness
POWER DOOR LOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/YELLOW	Harness In Driver's Kick Panel
POWER UNLOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (+)	GRAY	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	TAN/LT.GREEN	Factory Security Unit In Left Rear Of Trunk
TRUNK/HATCH RELEASE (+)	PURPLE/YELLOW	Trunk Release Switch Or Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Factory Security Unit In Left Rear Of Trunk
TACHOMETER WIRE	3.8L models: TAN/WHITE, TAN/ORANGE or TAN/LIGHT GREEN 4.6L models: RED/YELLOW, PINK/WHITE, RED/LIGHT BLUE or DARK BLUE/LIGHT BLUE	Ignition Coil Pack
BRAKE WIRE (+)	RED/LT.GREEN	At Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	At Harness At Column Coming From Steering Wheel Or Factory Security Unit In Left Rear Of Trunk
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 1997 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	TAN/WHITE	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
SECOND ACCESSORY WIRE	BLACK/GREEN	Ignition harness
POWER DOOR LOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/YELLOW	Harness In Driver's Kick Panel
POWER UNLOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (+)	GRAY	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	TAN/LT.GREEN	Factory Security Unit In Left Rear Of Trunk
TRUNK/HATCH RELEASE (+)	PURPLE/YELLOW	Trunk Release Switch Or Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Factory Security Unit In Left Rear Of Trunk
TACHOMETER WIRE	3.8L models: TAN/WHITE, TAN/ORANGE or TAN/LIGHT GREEN 4.6L models: RED/YELLOW, PINK/WHITE, RED/LIGHT BLUE or DARK BLUE/LIGHT BLUE	Ignition Coil Pack
BRAKE WIRE (+)	RED/LT.GREEN	At Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	At Harness At Column Coming From Steering Wheel Or Factory Security Unit In Left Rear Of Trunk
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 1998 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	TAN/WHITE	Ignition harness
ACCESSORY WIRE	GRAY/YELLOW	Ignition harness
SECOND ACCESSORY WIRE	BLACK/GREEN	Ignition harness
POWER DOOR LOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/YELLOW	Harness In Driver's Kick Panel
POWER UNLOCK (models with OEM keyless: negative trigger, models without OEM keyless: 5-wire reverse polarity)	PINK/GREEN	Harness In Driver's Kick Panel
PARKING LIGHTS (+)	BROWN	Harness In Driver's Kick Panel
DOOR TRIGGER (+)	GRAY	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	TAN/LT.GREEN	Factory Security Unit In Left Rear Of Trunk
TRUNK/HATCH RELEASE (+)	PURPLE/YELLOW	Trunk Release Switch Or Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Factory Security Unit In Left Rear Of Trunk
TACHOMETER WIRE	3.8L models: TAN/WHITE, TAN/ORANGE or TAN/LIGHT GREEN 4.6L models: RED/YELLOW, PINK/WHITE, RED/LIGHT BLUE or DARK BLUE/LIGHT BLUE	Ignition Coil Pack
BRAKE WIRE (+)	RED/LT.GREEN	At Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	At Harness At Column Coming From Steering Wheel Or Factory Security Unit In Left Rear Of Trunk
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 1999 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2000 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2001 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2002 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2003 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2004 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	YELLOW and LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	WHITE/PINK	Ignition harness
12V IGNITION WIRE	RED/LT.GREEN	Ignition harness
SECOND IGNITION WIRE	GRAY/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/LT.GREEN	Ignition harness
SECOND ACCESSORY WIRE	RED/BLACK	Ignition harness
POWER DOOR LOCK (+)	LT.GREEN	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
POWER DOOR UNLOCK (+)	PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
PARKING LIGHTS (+)	BROWN	At Headlight Switch
DOOR TRIGGER (-)	YELLOW/BLACK (driver's door) GRAY/RED (passenger door)	Harness In Driver's Kick Panel
TRUNK TRIGGER (-)	BROWN/WHITE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TRUNK RELEASE (+)	PURPLE/YELLOW	Harness In Driver's Kick Panel
FACTORY ALARM ARM	Arms with lock	
FACTORY ALARM DISARM (-)	DARK GREEN/PURPLE	Harness In Driver's Kick Panel Or Module Above Kick Panel Left Of Steering Column
TACHOMETER WIRE	3.8L models: DK. BLUE/LT. GREEN, RED/LT. BLUE, or the PINK/WHITE 4.6L: Use any wire that is NOT RED or WHITE/LT.BLUE	Ignition Coil
BRAKE WIRE (+)	RED/LT.GREEN	Brake pedal switch
HORN TRIGGER (-)	YELLOW/LT.GREEN	Harness at Steering Column
LEFT FRONT WINDOW UP	WHITE/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	WHITE/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	TAN/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	YELLOW/BLUE	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	RED/BLUE	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/BLACK	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	RED/BLACK	Harness In Driver's Kick From Driver Door
Some models are equipped with Ford's PATS anti-theft system. This needs to be bypassed when installing a remote start system		

WIRING INFORMATION: 2005 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	DARK GREEN	Ignition harness
12V IGNITION WIRE	WHITE/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/PINK	Ignition harness
POWER DOOR LOCK (+)	WHITE/PURPLE	Harness In Driver's Kick Panel Or Black 26-pin Plug At Junction Box in Passenger Kick Panel
POWER DOOR UNLOCK (+)	DK.BLUE/LT.GREEN	Harness In Driver's Kick Panel Or Black 26-pin Plug At Junction Box in Passenger Kick Panel
Test door lock wires using driver's lock switch		
PARKING LIGHTS (+)	Use (-) parking light wire.	
PARKING LIGHTS (-)	BLACK/LT.GREEN	At Switch Or Blue 53-Pin Plug At Junction Box In Passenger Kick Panel
DOOR TRIGGER (-)	LT.GREEN/YELLOW	At Grey 26-Pin Plug At Junction Box In Passenger Kick Panel
TRUNK TRIGGER (+)	WHITE/YELLOW	At Black 26-Pin Plug At Junction Box In Passenger Kick Panel
TRUNK RELEASE (-)	WHITE/PURPLE	At Black 52-Pin Plug At Junction Box In Passenger Kick Panel
FACTORY ALARM ARM (-)	LT.BLUE/PINK	Harness In Driver's Kick Panel Or Black 26-Pin Plug At Junction Box In Passenger Kick Panel
FACTORY ALARM DISARM (-)	LT.BLUE/BLACK	Harness In Driver's Kick Panel Or Black 26-Pin Plug At Junction Box In Passenger Kick Panel
TACHOMETER WIRE	Wire that is NOT RED	Any Fuel Injector Or Ignition Coil
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	DK.BLUE	Harness at Steering Column
LEFT FRONT WINDOW UP	Cannot do. Motor is part of the module that operates the window motor.	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with Ford's SecuriLock Immobilizer system. This must be bypassed when installing a remote start system.		

WIRING INFORMATION: 2006 Ford Mustang

WIRE	WIRE COLOR	WIRE LOCATION
12V CONSTANT WIRE	LT.GREEN/PURPLE	Ignition harness
STARTER WIRE	DARK GREEN	Ignition harness
12V IGNITION WIRE	WHITE/YELLOW	Ignition harness
ACCESSORY WIRE	BLACK/PINK	Ignition harness
POWER DOOR LOCK (+)	WHITE/PURPLE	Harness In Driver's Kick Panel Or Black 26-pin Plug At Junction Box in Passenger Kick Panel
POWER DOOR UNLOCK (+)	DK.BLUE/LT.GREEN	Harness In Driver's Kick Panel Or Black 26-pin Plug At Junction Box in Passenger Kick Panel
Test door lock wires using driver's lock switch		
PARKING LIGHTS (+)	Use (-) parking light wire.	
PARKING LIGHTS (-)	BLACK/LT.GREEN	At Switch Or Blue 53-Pin Plug At Junction Box In Passenger Kick Panel
DOOR TRIGGER (-)	LT.GREEN/YELLOW	At Grey 26-Pin Plug At Junction Box In Passenger Kick Panel
TRUNK TRIGGER (+)	WHITE/YELLOW	At Black 26-Pin Plug At Junction Box In Passenger Kick Panel
TRUNK RELEASE (-)	WHITE/PURPLE	At Black 52-Pin Plug At Junction Box In Passenger Kick Panel
FACTORY ALARM ARM (-)	LT.BLUE/PINK	Harness In Driver's Kick Panel Or Black 26-Pin Plug At Junction Box In Passenger Kick Panel
FACTORY ALARM DISARM (-)	LT.BLUE/BLACK	Harness In Driver's Kick Panel Or Black 26-Pin Plug At Junction Box In Passenger Kick Panel
TACHOMETER WIRE	Wire that is NOT RED	Any Fuel Injector Or Ignition Coil
BRAKE WIRE (+)	LT.GREEN	At Brake Pedal Switch
HORN TRIGGER (-)	DK.BLUE	Harness at Steering Column
LEFT FRONT WINDOW UP	Cannot do. Motor is part of the module that operates the window motor.	
LEFT FRONT WINDOW DOWN		
RIGHT FRONT WINDOW UP		
RIGHT FRONT WINDOW DOWN		
LEFT REAR WINDOW UP		
LEFT REAR WINDOW DOWN		
RIGHT REAR WINDOW UP		
RIGHT REAR WINDOW DOWN		
This vehicle is equipped with Ford's SecuriLock Immobilizer system. This must be bypassed when installing a remote start system.		