

Timing Components: Procedures


Timing Drive Components - Hydraulic Chain Tensioner, LH

Timing Drive Components - Hydraulic Chain Tensioner, LH

Material

Item	Specification
Motorcraft SAE 5W-30 Premium Synthetic Blend Motor Oil XO-5W30-QSP (US); Motorcraft SAE 5W-30 Super Premium Motor Oil CXO-5W30-LSP12 (Canada); or equivalent	WSS-M2C929-A

Material

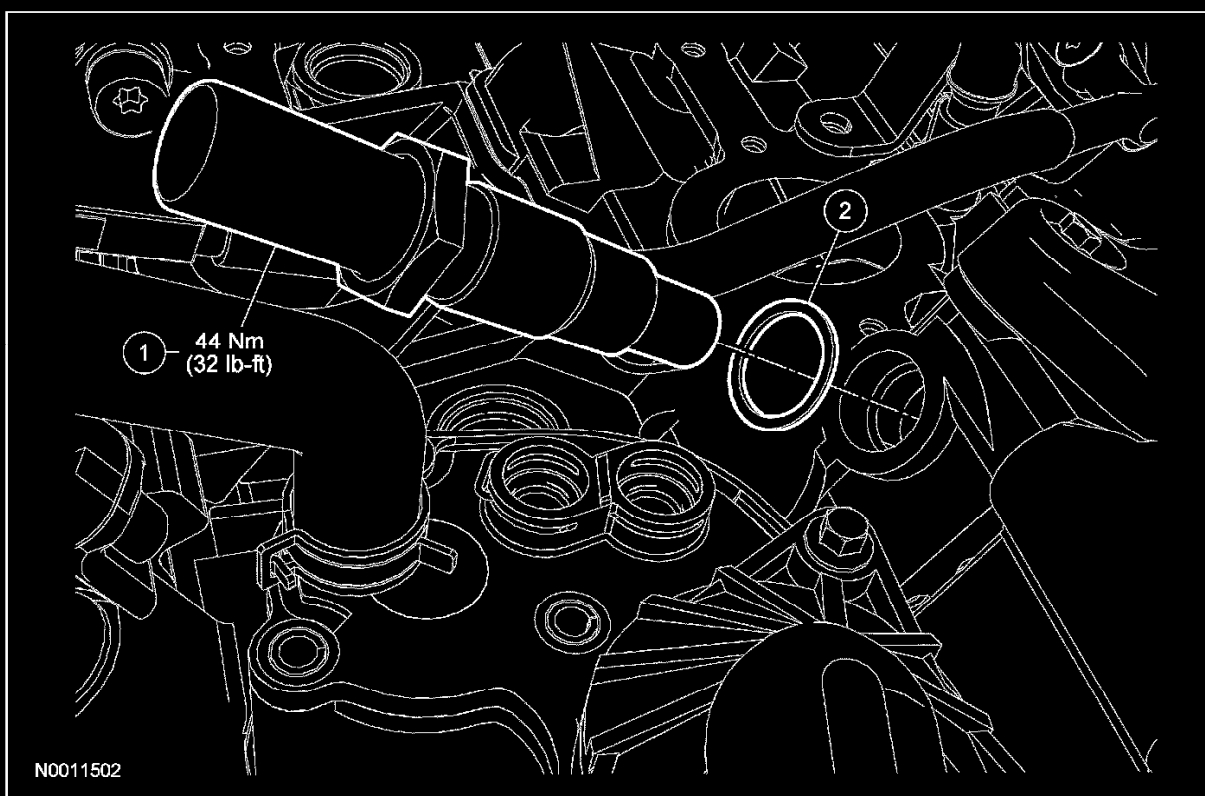

Item	Part Number	Description
1	6K254	LH hydraulic chain tensioner
2	—	LH hydraulic chain tensioner O-ring seal

Removal and Installation

1. Disconnect the battery ground cable.
2. Remove the engine coolant temperature sensor.
3. Remove the LH hydraulic chain tensioner.
 - To install, tighten to **44 Nm (32 ft. lbs.)**.
4. **NOTE:** Lubricate the new O-ring seal with clean engine oil.

Remove and discard the O-ring seal.
5. To install, reverse the removal procedure.